# ALV Commissioning box for wall diffusers



## **QUICK FACTS**

- Used for the following wall diffusers: COLIBRI W, EAGLE W, LOCKZONE W and PELICAN W.
- O Simple commissioning, fixed measurement tappings.
- O Cleanable, removable damper.



# **Technical description**

#### Design

Contains removable commissioning damper, fixed measurement tappings and air distribution baffle. The commissioning box is available with two different connection options: rear and side connection respectively. Air tightness class according to SS-EN 12237 and VVS/AMA 12, class C.

## **Materials and surface treatment**

The ALV commissioning box is made of galvanized sheet steel and has internal sound absorbent insulation\*\*) with reinforced surface layer.

\*\*)Fire-resistance graded to B-s1,d0 in accordance with EN ISO 11925-2.

#### **Accessories**

#### Frame:

ALVT 1. For the aesthetic installation of the ALV commissioning box.

# **Project design**

Technical data are available in combination with each air diffuser.

## **Assembly**

See Figure 1.

- 1. Cut an opening in the wall according to the wall opening dimensions specified.
- 2. Place the commissioning box in the opening.
- 3. Apply sealing compound between the commissioning box and the mounting frame to prevent air leakage. Insert the mounting frame into the commissioning box and secure it with screws in the short sides to the commissioning box and to the wall structure.

- 4. The assembly and dismantling of the component parts are shown in Figure 1.
- 5. Press the diffuser face to engage it in the mounting frame.

## Commissioning

Commissioning should be carried out with the wall terminal face mounted. Pull the measuring tube and damper adjustment cords out of the wall terminal through the front. Connect a pressure gauge to the measuring tube. The desired commissioning pressure can be calculated using the rated coefficient of performance (K-factor) of the wall terminal. Set the damper to the correct blade position, tie a commissioning knot in the damper cords to indicate the damper position, then lock the cords.

#### **Maintenance**

The commissioning box has a removable commissioning damper, which enables cleaning of the duct system via the commissioning box. The interior surfaces of the box can be cleaned by vacuum cleaning using a brush nozzle. Turn the distribution plate inside the commissioning box to the side for access of the tubular damper casing.

Grab the handle of the tubular damper casing and rotate it out of its bayonet holder. For more info, please see the Installation and maintenance instructions for the relevant air diffuser.

#### **Environment**

The Building Material Declaration is available for downloading at www.swegon.com.

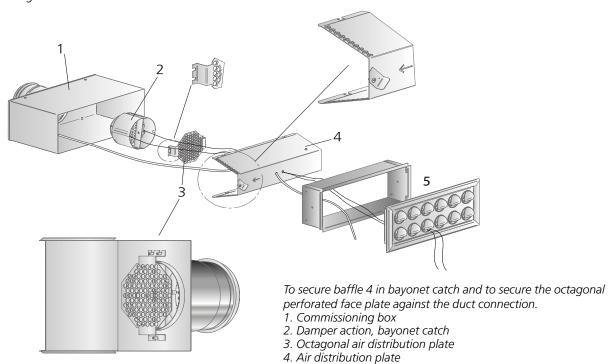


Figure 1. Installation.

5

5. Mounting frame + air diffuser

# **Dimensions and weights**

#### **ALV**

Size	ØD	F	G	G2	K	L	М	ΙχJ	Weight, K model, kg	Weight, B model, kg
300-150	99	295-375	225-305	270-350	85	145-225	195-275	305 x 155	2,6	2,4
400-150	124	295-375	225-305	331-411	85	180-260	240-320	405 x 155	3,5	3,0
400-200	159	315-395	225-305	331-411	100	145-225	225-305	405 x 205	4,0	3,5
550-250	199	360-440	251-331	371-451	120	145-225	245-325	555 x 255	5,9	5,0
550-300	249	385-465	251-331	425-505	145	145-225	275-355	555 x 305	7,1	5,9

#### **ALVT 1 frame**

Size	А	В	L
300-150	330	180	230
400-150	430	180	230
400-200	430	230	230
550-250	580	280	255
550-300	580	330	255

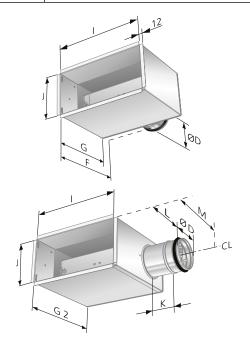


Figure 2. ALV commissioning box. B = Rear connection, K = Connection on short side, CL = Centre line.


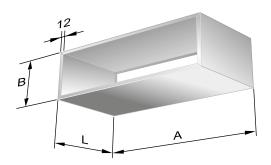


Figure 3. ALVT 1 frame.

# **Ordering key**

### **Product**

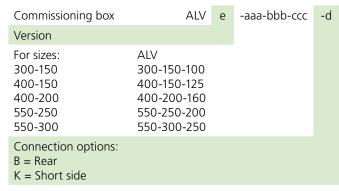

# **Specification text**

Swegon's ALV commissioning box with the following functions:

- Removable commissioning damper
- Method of measurement with low systematic error
- Internal sound absorbing lining with fibre-migrationproof surface layer

Size: ALVe aaa-bbb-ccc-d xx items